

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.



toastmaster®
cookin' in style



Cool-Touch Belgian Waffle Baker

Use and Care Guide
Model 233

- BAKES A ROUND, PLATE-SIZE BELGIAN WAFFLE
- AUTO TEMPERATURE CONTROL
- MASTER COAT™ NON-STICK FINISH
- COVERED HINGE AREA FOR EASY CLEAN-UP
- READY SIGNAL LIGHT
- NON SLIP RUBBER FEET

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock or injury to persons, including the following:

- Read all instructions before using appliance.
- Do not touch hot surfaces. Use handles with care. Hot pads or oven mitts are recommended.
- Do not immerse waffle baker, plug or cord in water or other liquid. See instructions for cleaning.
- Close supervision is necessary when any appliance is used near children.
- This appliance is not for use by children.
- Do not use appliance unattended.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair or adjustment.
- When using this appliance, provide 4 to 6 inches air space above, behind, and on both sides for air circulation. Do not use on surfaces where heat may cause a problem.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Use appliance only as indicated in these instructions.

SAVE THESE INSTRUCTIONS

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 10 A, 1250 W, and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER: If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

CONDITIONING GRIDS

The grid surface being used requires conditioning before each heating that follows cleaning. To condition, lightly coat the grid surface with vegetable shortening. Plug into any 120 volt ~ 60 Hz outlet and the indicator light will come on telling you the unit is heating. When indicator light goes off, unit is preheated. The grids are ready to use.

To protect the premium quality non-stick surfaces, use only plastic, nylon or wooden utensils. Carefully follow suggested cleaning procedures. After time, if waffles show signs of sticking, carefully recondition your unit.

USING YOUR APPLIANCE

1. Before using, wipe cooking surface with a damp cloth and dry. Lightly coat grids with vegetable shortening and close lid.
2. Plug into any 120 V ~ 60 Hz outlet. The indicator light will come on telling you the unit is heating. Initially, some smoking may occur. This is normal for newly manufactured appliances and will not occur after the first few uses.
3. When indicator light goes off, immediately raise lid and pour approximately $\frac{2}{3}$ cup batter on lower grid. Close the lid. Indicator light will come on during baking process. The amount of batter required may vary with recipe or brand of mix. Any waffle recipe or mix may be used.
4. When light goes off the second time, gently lift lid to check for brownness. If lid shows resistance to lifting, the waffle may not be quite done. Close top and watch for steaming to stop before checking again.
5. Remove waffle when browned. If a second waffle is desired, pour batter immediately and close lid. If you prefer a darker and crisper waffle, close lid and let cook 1-2 minutes longer.
6. When finished baking, unplug and cool before cleaning.

BELGIAN WAFFLES

2 $\frac{2}{3}$ cups all-purpose flour	1 $\frac{3}{4}$ cups milk
2 $\frac{1}{4}$ tsp. RED STAR® active dry yeast	$\frac{1}{4}$ cup water
2 TBL. sugar	$\frac{1}{4}$ cup butter
1 tsp. salt	3 eggs

In a large bowl combine flour, yeast, sugar and salt; mix well. Heat milk, water and butter until very warm (120°F-130°F; butter does not need to melt). Add to flour mixture. Add eggs. Using an electric mixer, blend at low speed until moistened; beat 1 minute at medium speed. Cover bowl with plastic wrap and foil; refrigerate several hours or overnight.

TO CLEAN

CAUTION: UNPLUG FROM ELECTRICAL OUTLET BEFORE CLEANING. NEVER IMMERSE APPLIANCE IN WATER OR OTHER LIQUIDS.

- While grids are still warm, brush with clean, soft pastry brush or cloth.
- Do not use steel wool or coarse scouring pads. Remove stubborn stains with a plastic mesh puff or pad. For best results, use only products with directions stating safe for cleaning non-stick surfaces.
- The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth.

Any servicing requiring disassembly must be performed by an authorized service center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744 in the U.S. and Canada.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

LIMITED ONE-YEAR GUARANTEE

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 708 South Missouri St., Macon, MO 63552, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____

Model Number _____

Code Number (stamped on bottom) _____

EVERYBODY EATS. It's a fact of life.

**But sometimes preparing
meals can become a chore.**

**That's why TOASTMASTER has been invited
into millions of kitchens just like yours
so we can HELP YOU MASTER your
mixing, baking, grilling, toasting,
brewing, heating and serving
tasks WITH EASE AND STYLE.**

**The TOASTMASTER name stands for a
CELEBRATION of INNOVATION designed
to serve your life and keep you
COOKIN' IN STYLE.**