

# Quick Start

## V.92 PCI Pro Modem



### Installing the Drivers:

#### Windows 98, Windows 2000, and Windows ME



You must install the driver from the included CD-ROM before installing the hardware. Refer to the uninstall procedure if required to begin a clean installation process.

1. Insert the Installation CD-ROM provided with the modem.
2. Click **Install** in the dialog box to begin the installation process.
3. Click **OK** to install the appropriate modem driver on your system.
4. When the installation is complete, the dialog box will appear. Click **Exit**.
5. Proceed to the hardware installation procedure.

#### Windows NT 4.0

1. Follow the hardware installation procedure first before continuing with the driver installation.
2. Insert the Installation CD-ROM provided with the modem.
3. Click **Install** in the dialog box to begin the installation process.
4. Click **OK** to install the appropriate modem driver on your system.
5. Click **OK** to restart your computer.

#### Windows XP

1. Follow the hardware installation procedure first before continuing with the driver installation.
2. Insert the Installation CD-ROM provided with the modem.
3. Click **Install** in the dialog box to begin the installation process.
4. Click **OK** to install the appropriate modem driver on your system.
5. When the installation is complete, the dialog box will appear. Click **Exit**.

0530-0276-000

Continued on reverse...


# Quick Start

## Continued...



### Installing the Hardware:

1. Turn off and unplug the computer and all peripherals. Open the computer case and discharge any static electricity by grounding yourself (touch the power supply, etc. or wear a grounding strap).
2. Carefully insert and secure the modem into an open PCI slot and close the computer.

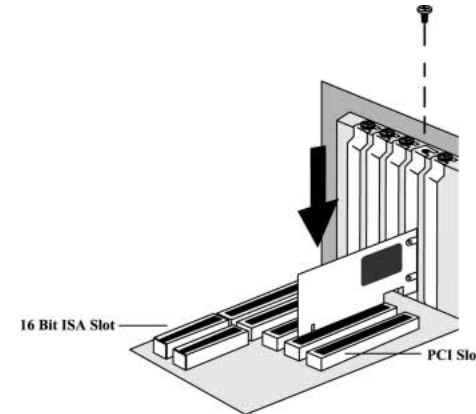

3. Connect the modem **Line** input to an analog phone jack using an RJ-11 phone cable. Optionally connect a telephone to the **Phone** input on the modem card. Reconnect the peripherals and start the computer.

### Uninstall Procedure:

1. Insert the CD-ROM provided with the modem.
2. Open the CD-ROM from the desktop and double-click the "LT Remove.exe" application.

For more detailed information on installation, the Modem-On-Hold feature, Bitware, and Adobe Acrobat 4.0 consult the User Guide included with the modem.

Support and installation information can also be found at <http://www.actiontec.com/>: